
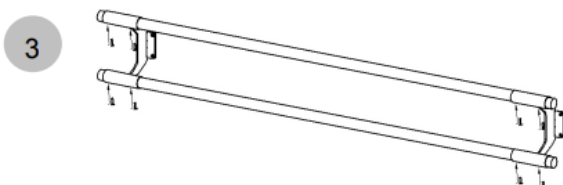
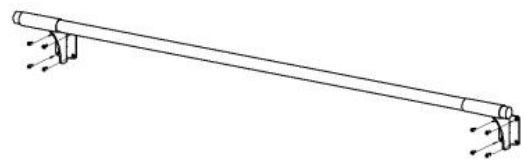
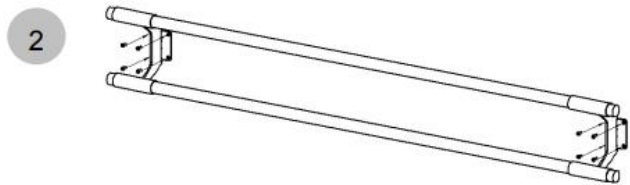
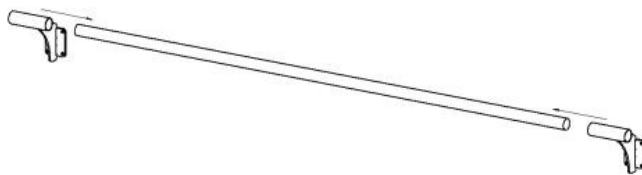


WALL BRACKETS

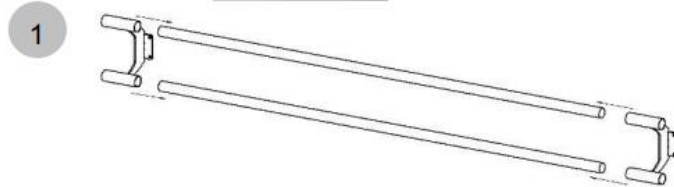

EN

1. Before fixing the brackets to the wall, measure and mark the location for their mountings. Ensure the mounted brackets will support horizontal bars. Depending on the available space, some brackets should be mounted with the bars already in place. The maximum distance between brackets must not exceed 2 metres.
2. Attach the brackets to the wall, keeping in mind that the wooden bars must fit through the hole of each cylindrical saddle.
3. Once the wooden bars are in place, tightly secure them by fastening the screws from below.